



欢迎

欢迎来到飞利浦世界！您能选择和购买飞利浦的产品，我们非常高兴。您可以在我们的官方网站上获得飞利浦公司的全方位技术支持，如：使用手册、软件下载、保修信息等。
www.philips.com

产品特点

- 本产品是一款功能便捷的数码录音笔。采用飞利浦音频处理技术,适用于教学、采访、会议等录音场景,产品特点如下:
- 支持48KHz录音。
- 支持连接PC端录音文件转文本。
- 使用高速Type-c存取录音文件和数据。
- 数字降噪功能。
- 定时录音功能。

安全信息

1. 为了避免短路,切勿将产品放置在触水受潮处。
2. 不要将产品放在加热设备附近或阳光直射的地方。
3. 请注意,切勿挤压电缆,特别是插头处。

注意

- 特别声明:使用本产品前请仔细阅读本说明书,如因人为操作或不可抗力因素而导致数据丢失,本公司一概不予负责。特别提醒用户小心操作,注意将资料另外备份。
- 显示图像仅作参考。飞利浦保留更改颜色/外观/设计/参数/产品功能的权利,硬件、软件、APP如有更新,恕不另行通知。

使用须知


- 第一次使用前建议使用合规充电器先对机器充电3小时左右。

您的设备

设备包含



主机预览

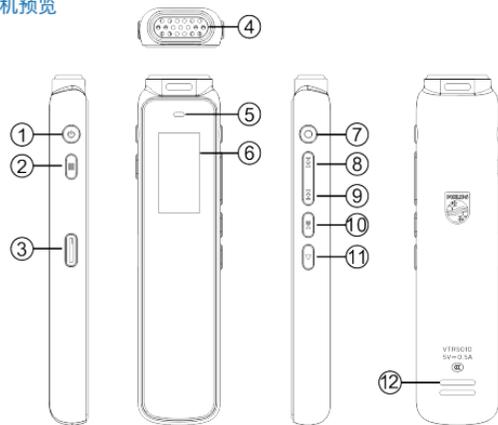

- ① 电源键
- ② 菜单键
- ③ Type-c接口
- ④ 咪头
- ⑤ 指示灯
- ⑥ 显示屏
- ⑦ 录音键
- ⑧ 上一曲
- ⑨ 下一曲
- ⑩ 播放键
- ⑪ 音量键
- ⑫ 喇叭

使用说明

开/关机

长按电源键3-4秒开机,显示“PHILIPS”,在开机状态下,长按电源键关机。

录音

1. 在开机状态下,按“录音”键 2-3 秒进入录音,在录音的过程中,短按一下录音键,录音暂停,再短按取消暂停,并继续录音,长按录音键保存录音。
2. 关机状态下,长按录音键 2-3 秒进入录音。
3. 在语音播放停止,短按“菜单键”弹出设置列表,按上下曲键切换选择需要的菜单,按“播放键”确认即可进入相应菜单的选择界面,按“上下曲键”切换选择后,再按“播放键”确认即可选中并返回菜单列表。

回放

在语音播放停止界面,按“播放键”即可播放,在播放过程中,短按“播放键”暂停播放,再短按一次取消暂停并继续播放。
在播放停止时按“菜单键”可选择播放模式或删除文件。

连接电脑

录音笔作为存储设备,可使用 USB 数据线将录音笔与电脑相连对文件进行存储、备份和移动。
连接电脑时,会弹出 USB 连接方式选择,选择传输文件才能连上电脑读取文件;选择充电时,只能充电,如果连接电脑不作选择,几秒后会自动默认为传输方式。

注意

- 在文件移入或移出录音笔时,请不要断开录音笔与电脑的连接,否则会损坏文件。

复位

长按播放键 8 秒,即可重启设备。

此产品是一件设计精良的高品质数码产品,在正确使用及保养下应能正确地表现其优越性能。
自购买日期始,整机保修一年。关于主要部件保修期限,按照国家消费法规定执行。数码录音笔的中国区总经销(深圳市京华数码科技有限公司)将按下列保用条款持卡用户提供免费保修服务。

保用条例:

保用服务只限于一般正常使用下有效。一切人为损坏,例如接入不当电源,使用不当配件,不依说明书使用,因运输及其他意外而造成之损坏,非经本公司认可之维修和改装,用于商业及工业目的造成产品损坏,错误使用或疏忽而造成损坏,不适当之安装或因天灾造成损坏等,保用服务立刻失效。此保用服务并不包括附件,辅助装置,运输费。维修时请带上此卡及正本发票。

User's Name:	Model No:
用户姓名	型号
Address:	Serial No:
地址	机身编号
Tel.No:	Product Place:
电话	产地
Post Code:	
邮编	
Company Seal:	Shop name and address:
购买商品印章	购买商号名称及地址
Date of Purchase:	Invoice No:
购买日期	发票号
	TelNo/Post Code:
	电话/邮编

产品服务热线: 400 800 7890





Welcome

Welcome to the world of Philips! We are delighted that you choose and buy Philips products. You can have access to full set of technical support on Philips official website, such as user manuals, software downloads, and guarantee information, etc.

www.philips.com

Product Features

This product is a convenient digital recorder, which adopts Philips audio processing technology and is suitable for teaching, interviews, meetings and other recording scenes. The product features are as follows:

- Support 48KHz recording.
- Support the conversion of audio files into texts on the PC.
- USB Type-C connection for high speed data transfer.
- Digital noise reduction.
- Timer recording.

Safety Information

- Do not expose this unit to water and moisture to avoid short circuit.
- Do not expose this unit to any heating device or direct sunlight.
- Do not pinch the cable, especially at the plug.

Notice

• Special Announcement: Before using the product, please read the Manual carefully. The Company shall not be held liable for any data loss due to incorrect manual operation or force majeure. We specially recommend that users make additional copies of the files in the device.

• Images are for reference only. Philips reserves the right to change the color/appearance/design/parameters/product functions without prior notice.

Safety Information


- Please use an exclusive charger to recharge the device for 3 hours before using it for the first time.

Your Voice Recorder

What's in the box



Overview

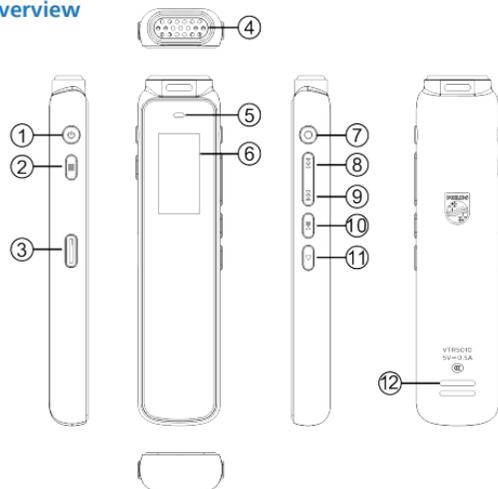

- | | |
|-------------------|----------------|
| ① Power key | ⑦ Record key |
| ② Menu selection | ⑧ Previous |
| ③ Type-C USB | ⑨ Next |
| ④ Mic | ⑩ Playback key |
| ⑤ Indicator light | ⑪ Volume key |
| ⑥ Screen | ⑫ Speaker |

Settings

On/Off

Long press "Power button" for 3-4 seconds to start up the device and "Philips" will display. In the power on state, long press "Power button" to shut down the device.

Recording

1. In the state of power-on, press "Record button" for 3-4 seconds to record. In the state of voice record, short press "Record button" to pause recording, press again to resume recording. Long press "Record button" to save recording.
2. In the state of power-off, long press "Record button" for 3-4 seconds to record.
3. When the voice playback stops, short press the "Menu button" to pop up the setting list, press the "Up and Down button" to switch to the desired menu, press the "Play button" to confirm and enter the selection interface of the corresponding menu, press the "Up and Down button" to switch the selection. After that, press the "Playback button" again to select and return to the menu list.

Playback

When the voice playback stops, press the "Play button" to play the voice. During the playback, short press the "Play button" to pause recording, press again to resume recording.

Press the "Menu button" when playback is stopped or paused to select playback mode or delete files.

PC connection

As a storage device, the recorder may be connected to a PC with a USB data cable for file storage, backup and on-the-go.

When connecting to the PC, USB connection mode selection will pop up. You can connect to the PC by selecting transfer file to read the file. You can only charge when you select charging. If you do not choose to connect to the PC, it will automatically default to transfer mode after a few seconds.

Note

- In case that the document is moved into or out of the recorder, please do not disconnect the recorder away from the computer; otherwise, the document may be damaged.

Reset

Hold down the Play key for 8 seconds to reset it.

This product is made of high quality material and great care has been taken in its manufacture. It is designed to give good performance provided it is properly operated and maintained. The product is sold subject to the understanding that if any defect in manufacture or material shall appear within 12 months, the warranty period is subject to country Consumer Law, Jingwah Digital Service will arrange for such defect to be rectified without change under the following warranty items and conditions.

Warranty Terms and Conditions:

The defect is not due to use of the product for other than domestic purposes, or an incorrect voltage, or use of improper accessories, or contrary to operating instructions, or to accidental damage (whether in transit or otherwise), misuse, neglect or inexpect repair, or incorrect installation, or the product is excessively used for improper purposes other than daily consumption, or accessories belonging to the product, transportation. Present this warranty card and sales invoice when demanding service from Philips authorized service centres.

User's Name: 用户姓名	Model No: 型号
Address: 地址	Serial No: 机身编号
Tel.No: 电话	Product Place: 产地
Post Code: 邮编	

Company Seal: 购买商品印章	Shop name and address: 购买商品名称及地址
Date of Purchase: 购买日期	Invoice No: 发票号
	Tel.No/Post Code: 电话/邮编

Product Service Hotline: 400 800 7890



© 2022 Speech Processing Solutions GmbH. All rights reserved.

This product has been manufactured by and is sold under the responsibility of Speech Processing Solutions GmbH, and Speech Processing Solutions GmbH is the warrantor in relation to this product.

Specifications are subject to change without notice. Philips and the Philips shield emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

Document version 1.0, 01/04/22