



# 使用手册 User manual

在我们的官方网站上获得飞利浦公司的全方位技术支持,如:使用手册、软 件下载、保修信息等。

www.philips.com//support

这是一款数字双模对讲机,支持数字和模拟制式对讲,满足多场景应急调控需 求,应用于交通运输、医疗、急护、列车营运、施工建设、道路维修、事故现场

- · 数字/模拟对讲机。
- · 对讲录音。
- · 组呼、个呼、全呼。
- 扫描功能。

请遵循各项电气安全规定和适用的法律。



- · 第一次使用时请检查外观完整无破损, 如果发现电量不足, 请使用标配的
- · 易燃易爆场所禁止充电。

# 您的设备

欢迎来到飞利浦世界!您能选择和购买飞利浦的产品,我们非常高兴。您可

## 产品特点

等多场景。

- 可编程按键。
- 紧急报警。

## 安全信息

在使用和操作设备前,为确保设备性能最佳,并避免出现危险或非法情况。

- 充电器座充充电,请勿边充电边使用本设备。
- · 座充只对适配机型的电池充电, 否则可能导致损坏。

主机预览

1 PTT键

3 录音开关

4 录音回放

5 SOS

2 背夹

7 天线

8 信道选择

9 开关机(音量加减)

10 菜单键/确认键

11 联系人列表

12 方向键

13 P1键







14 P2键

15 P3键


17 返回键


18 喇叭


20 电池扣位

16 返回对讲界面

19 耳机/写频接口







常用功能

开/关机

- 1. 短按"录音回放键"可以回放最后一条对讲录音
- 2. 长按"录音回放键"可以回放上一条对讲录音说 音,如果有多条需要回放,请长按"录音回放键



对讲机通话之前,两台对讲的机器,发射和 接收频点必须设置相同,接收和发射亚音码 相同,按PTT键开启对讲功能。



旋转旋钮键可调整音量大小。




## 状态指示说明

### 主机状态 指示灯状态 绿灯慢闪 低电状态 红灯闪 对讲发射 红灯常亮 绿灯常亮

正常待机状态

将机器底部的电池盖扣位往里按,同时往上掰,打开电池。

电池盖拆卸方式

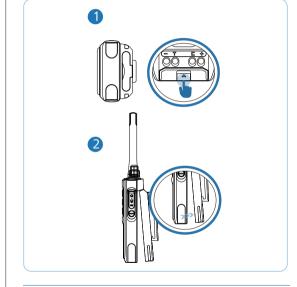

# 温馨提示

· 了解更多使用操作,请访问: www.philips.com/voicetracer

# **PHILIPS** 保修卡

此产品是一件设计精良的高品质数码产品 ,在正确使用及保养下应能正确地表现其

自购买日期始,整机保修一年。关于主要部件保修期限,按照国家消费法规定执行。 公网智慧语音终端中国区总经销(深圳市京华数码科技有限公司)将按下列保用条款 持卡用户提供免费保修服务。

# 保用条例:

保用服务只限于一般正常使用下有效。一切人为损坏,例如接入不适当电源,使用 不适当配件,不依说明书使用,因运输及其他意外而造成之损坏,非经本公司认可 之维修和改装,用于商业及工业目的造成产品损坏,错误使用或疏忽而造成损坏, 不适当之安装或因天灾造成损坏等,保用服务立刻失效。此保用服务并不包括附 件,辅助装置,运输费。维修时请带上此卡及正本发票。



el No:	
al No:	
编号	
uct Place:	

产品服务热线: 400 800 7890

© 2024 Speech Processing Solutions GmbH, All rights reserved.

Specifications are subject to change without notice. Philips and the Philips shield

This product has been manufactured by and is sold under the responsibility of Speech Processing Solutions GmbH, and Speech Processing Solutions GmbH is the warrantor in relation to this product.

emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

Document version 1.0, 16/08/24





# Welcome

Welcome to the world of Philips! We are Philips product. You can have access to full set of technical support on Philips official website, such as user manuals. software downloads, and warranty information, etc.

www.philips.com/support

## **Product Features**

This is a digital dual-mode intercom. It can be used in transportation, medical treatment, first aid, train operation, construction, road maintenance, accident site and other scenarios.

- . Digital/analog two way intercom.
- Voice recording.
- Programmable keys.
- Emergency alarms.
- Single call/group call intercom.
- Scanning function.

## **Safety Information**

Before operating this product, please observe all electrical safety regulations and applicable laws to ensure its best performance and avoid dangerous or illegal circumstances.



- Please check whether the appearance is intact upon the first use. If the power is insufficient, please use the standard charger and docking station for charging. Do not use the device while charging.
- The stand charger only charges the battery of the adapted model, otherwise damage may result.
- Charging in flammable and explosive environments is prohibited.

# Your Device

Overview

1 PTT Kev

2 Back Clip

6 Indicator

3 Recording Key

4 Recording Playback

# What's in the box



13 14 15

8 Channel knob

11 Contacts list

12 Direction Key

13 P1 Kev

10 Confirm/Menu Kev

7 Antenna



14 P2 Kev

15 P3 Key

17 Return Kev


19 Earphone/Coding Interface

20 Battery Buckle Slot

18 Speaker

9 Power (volume adjustment) 16 Return to Intercom Interface





# Voice recording

Power on/off

Only valid for digital channel

Commonly used function

- 1. Under power-on standby, press the Recording Key and hear "on" to enter the recording, you can record the intercom call. The total recording time is 8 minutes. after 8 minutes the recording will automatically loop to cover the previous message.
- 2. Press and hold the Recording On/Off key, when you hear "Off", the recording function will be closed.

## Audio playback

Only valid for digital channel

- 1. Short press the Recording Playback Key to play back the last intercom recording.
- 2. Long press Recording Playback Key can play back the previous intercom recording, if there are more than one to play back, please long press Recording Playback Key to switch.

### Intercom call


Before the intercom call, the two intercom devices, transmit and receive frequency points must be set the same, receive and and transmit the same sub-tone code, press the PTT key to open the intercom function.



Turn the knob to adjust the volume level.




## Status instructions



# Battery cover disassembly

 Press inwards the battery cover buckle at the bottom of the device and at the same time push upwards to open the battery.

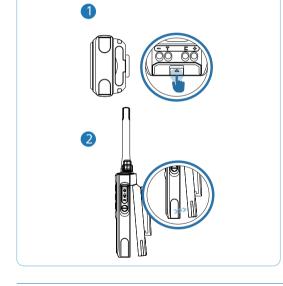

## Reminder

To know more about our operations, please visit;

www.philips.com/voicetracer



# Warranty Terms and Conditions:

**PHILIPS** 

Warranty Card

The defect is not due to use of the product for other than domestic purposes, or an incorrect voltage, or use of improper accessories, or contrary to operating instructions, or to accidental damage(whether in transit or otherwise), misuse, neglect or inexpect repair. or incorrect installation, or the product is excessively used for improper purposes other than daily consumption, or accessories belonging to the product, transportation. Present this warranty card and sales invoice when demanding service from Philips authorized service centres.

This product is made of high quality material and great care has been taken in its

maintained. The product is sold subject to the understanding that if any defect in

without change under the following warranty items and conditions.

manufacture. It is designed to give good performance provided it is properly operated and

manufacture or material shall appear within 12 months, the warranty period is subject to

country Consumer Law, Jingwah Digital Service will arrange for such defect to be rectified

User's Name: Model No: 用户姓名 Serial No: 机身编号.... Product Place: 产地... Post Code: 邮编

Company Seal: 购买商品印章 Date of Purchase: Invoice No: 购买日期 \_\_\_\_\_

Address:

地址.....

Tel.No:

Shop name and address: 购买商号名称及地址 Tel No/Post Code:

Product Service Hotline: 400 800 7890

© 2024 Speech Processing Solutions GmbH. All rights reserved.

This product has been manufactured by and is sold under the responsibility of Speech Processing Solutions GmbH, and Speech Processing Solutions GmbH is the warrantor in relation to this product.

Specifications are subject to change without notice. Philips and the Philips shield emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

Document version 1.0, 16/08/24

